



**SX - 6000**

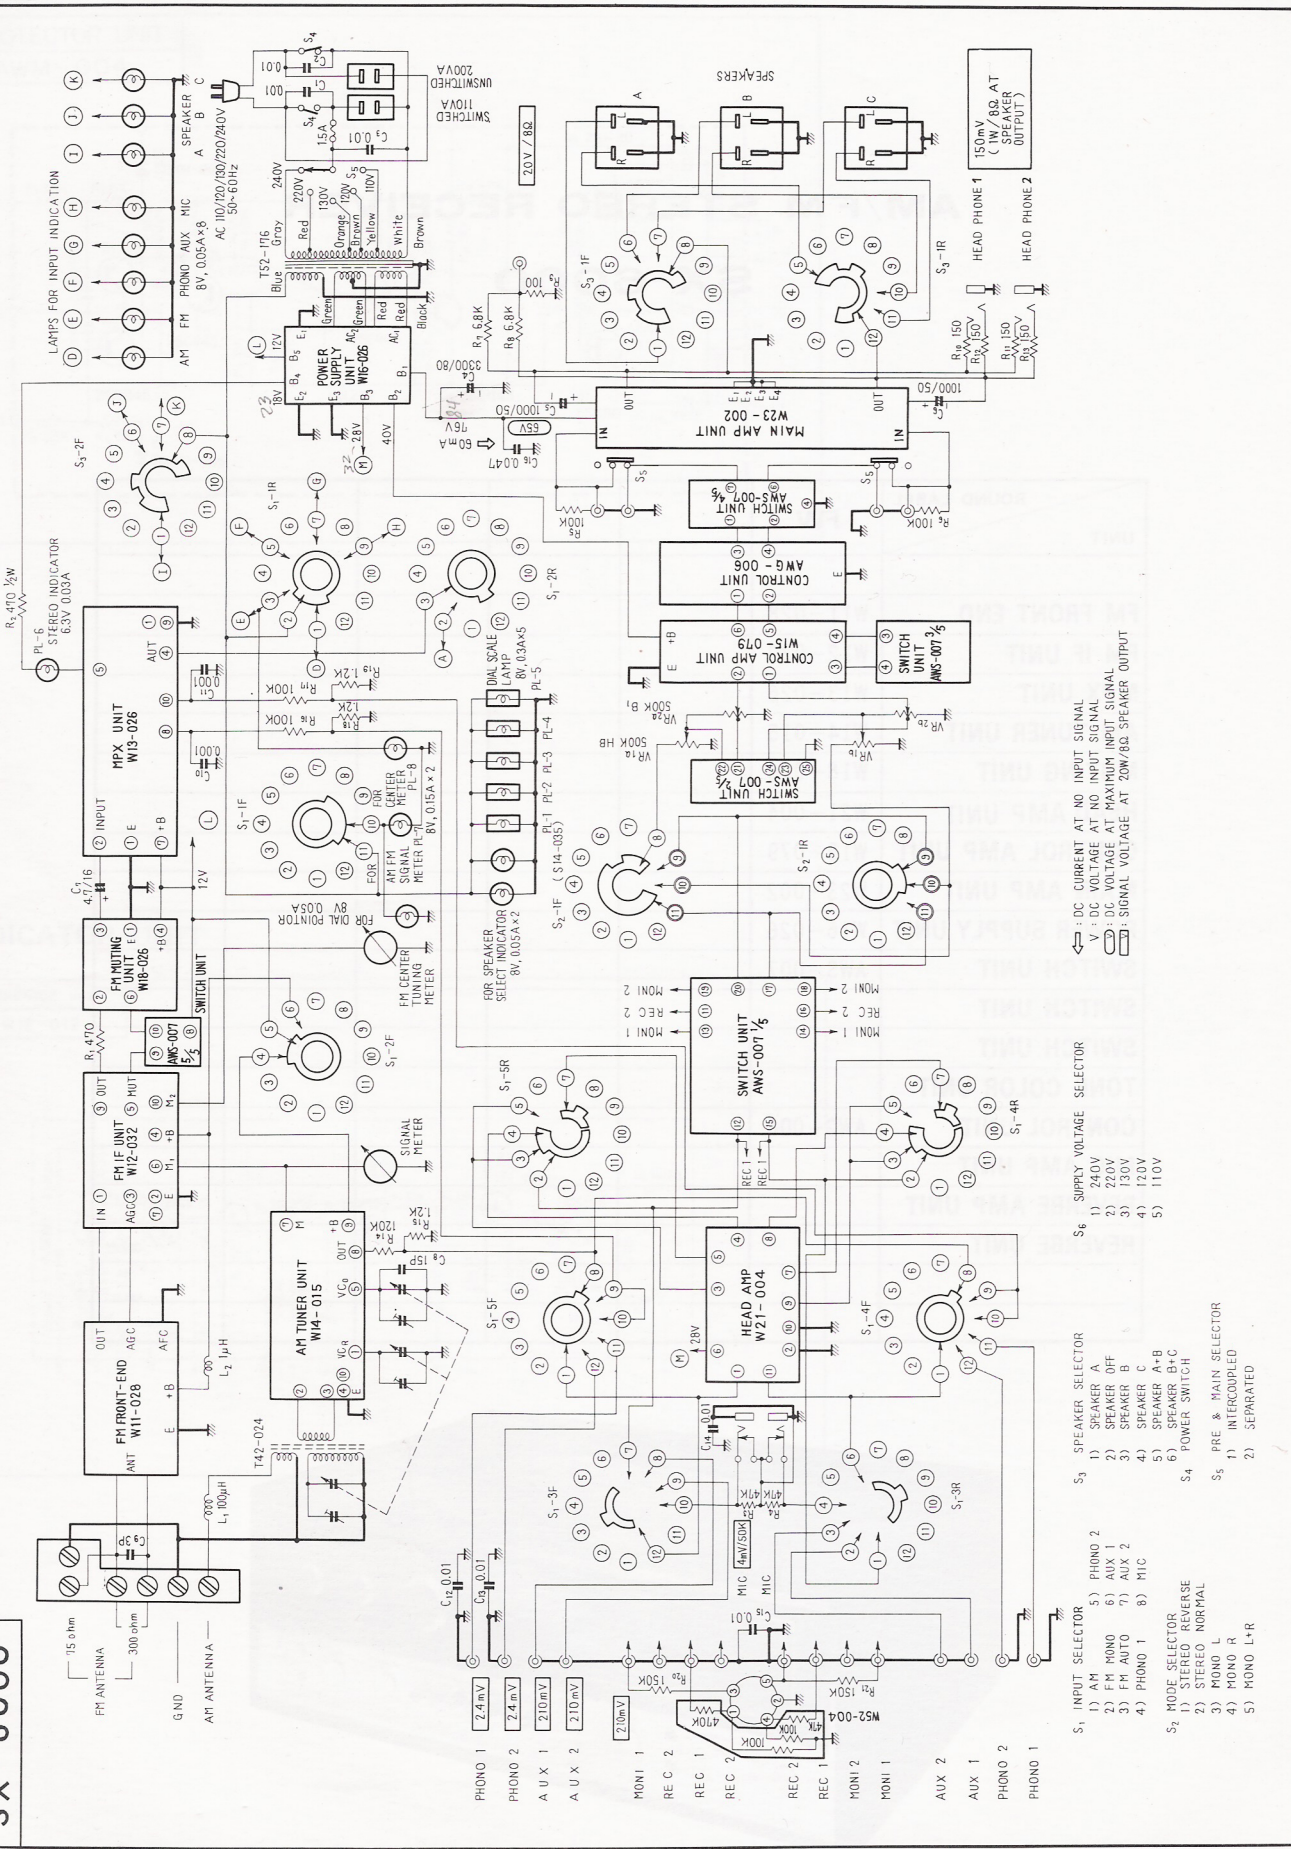


LAMPS FOR INPUT INDICATION  
 AM FM PHONO AUX MIC  
 8V, 0.05A x 8  
 AC 110/120/130/220/240V  
 30-60Hz

- S<sub>1</sub> INPUT SELECTOR**  
 1) AM  
 2) FM MONO  
 3) FM AUTO  
 4) PHONO 1  
 5) PHONO 2
- S<sub>2</sub> MODE SELECTOR**  
 1) STEREO REVERSE  
 2) STEREO NORMAL  
 3) MONO L  
 4) MONO R  
 5) MONO L+R
- S<sub>3</sub> SPEAKER SELECTOR**  
 1) SPEAKER OFF  
 2) SPEAKER B  
 3) SPEAKER C  
 4) SPEAKER A+B  
 5) SPEAKER B+C  
 6) SPEAKER B+C  
 7) SPEAKER A+B+C  
 8) SPEAKER A+B+C
- S<sub>4</sub> POWER SWITCH**  
 1) INTERCOUPLED  
 2) SEPARATED
- S<sub>5</sub> PRE & MAIN SELECTOR**  
 1) INTERCOUPLED  
 2) SEPARATED
- S<sub>6</sub> SUPPLY VOLTAGE SELECTOR**  
 1) 240V  
 2) 220V  
 3) 120V  
 4) 130V  
 5) 110V
- ← DC CURRENT AT NO INPUT SIGNAL  
 V DC VOLTAGE AT NO INPUT SIGNAL  
 V DC VOLTAGE AT MAXIMUM INPUT SIGNAL  
 V DC VOLTAGE AT 20W/8Ω SPEAKER OUTPUT


FM FRONT END

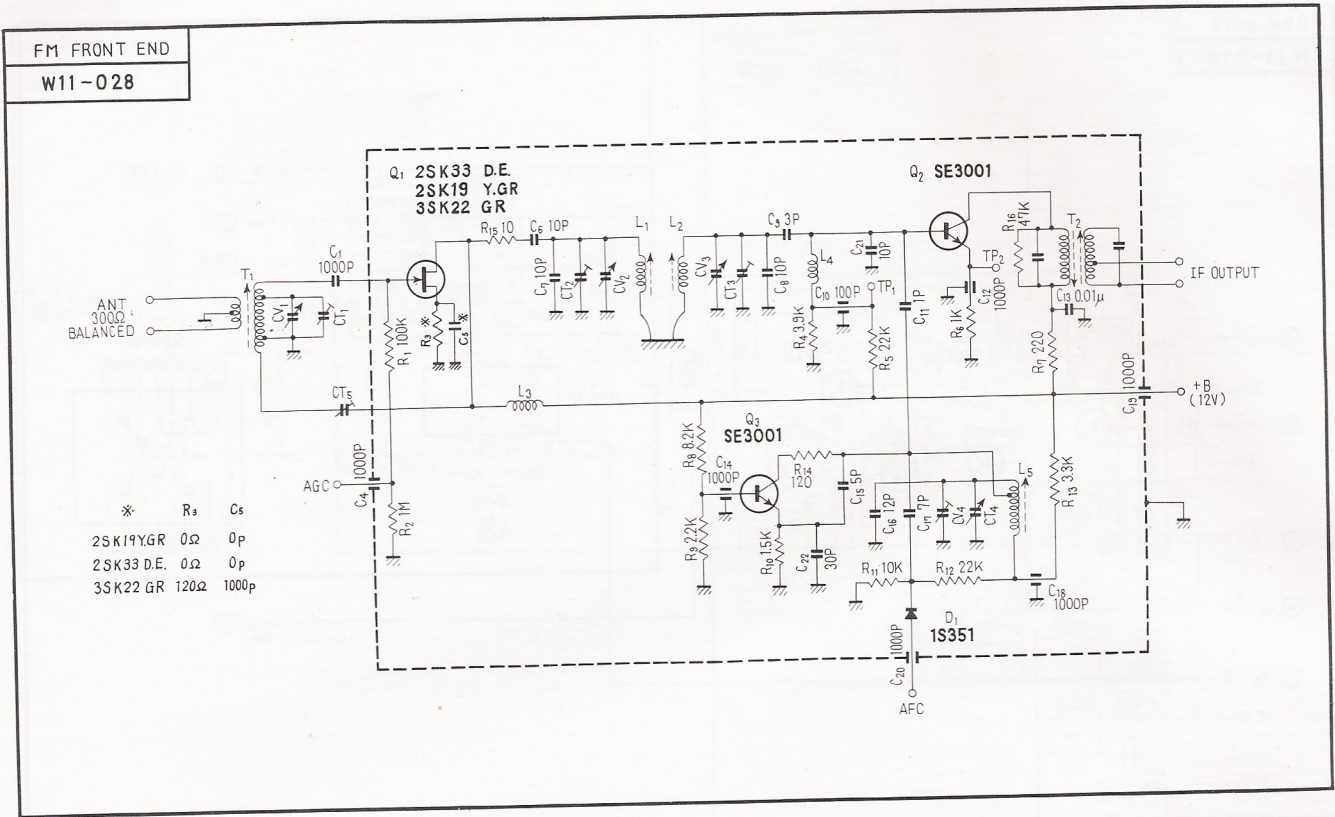


FM IF UNIT

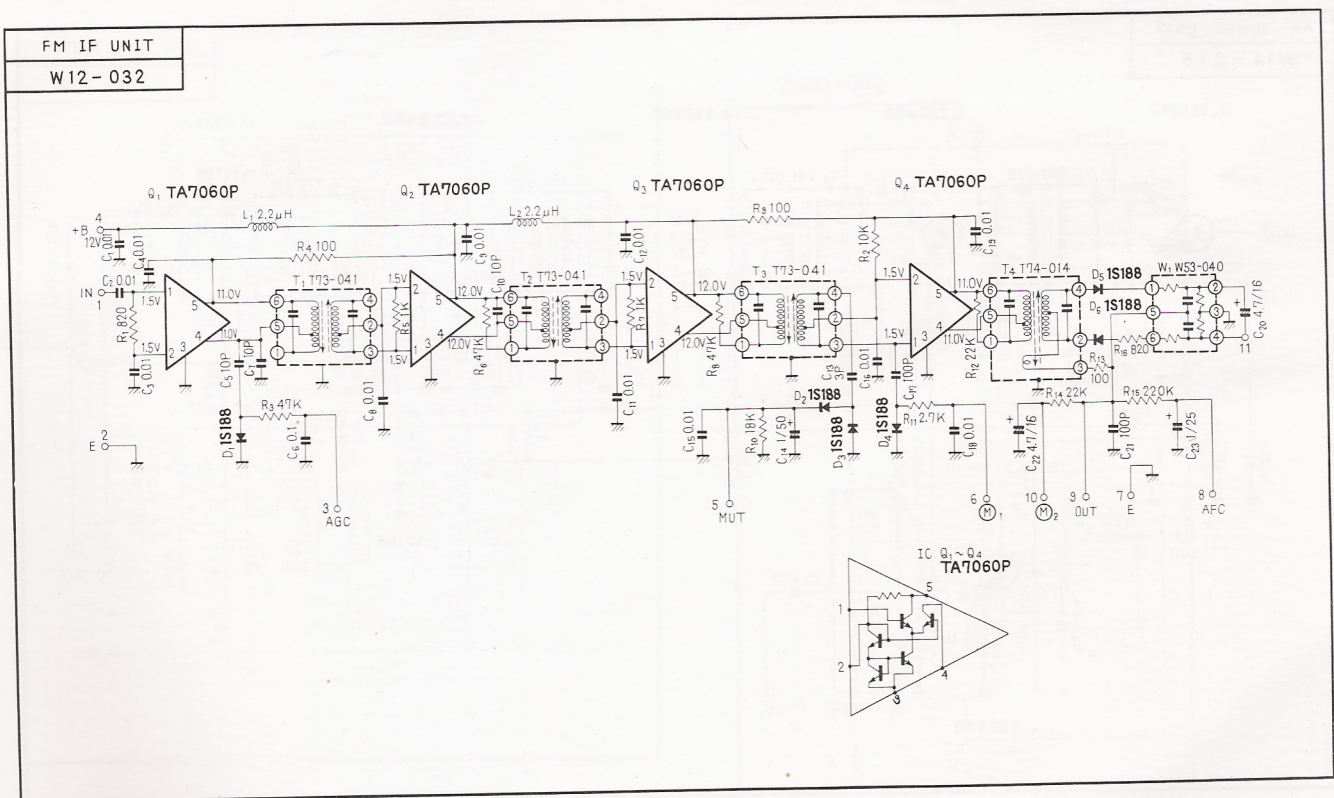


# MPX UNIT

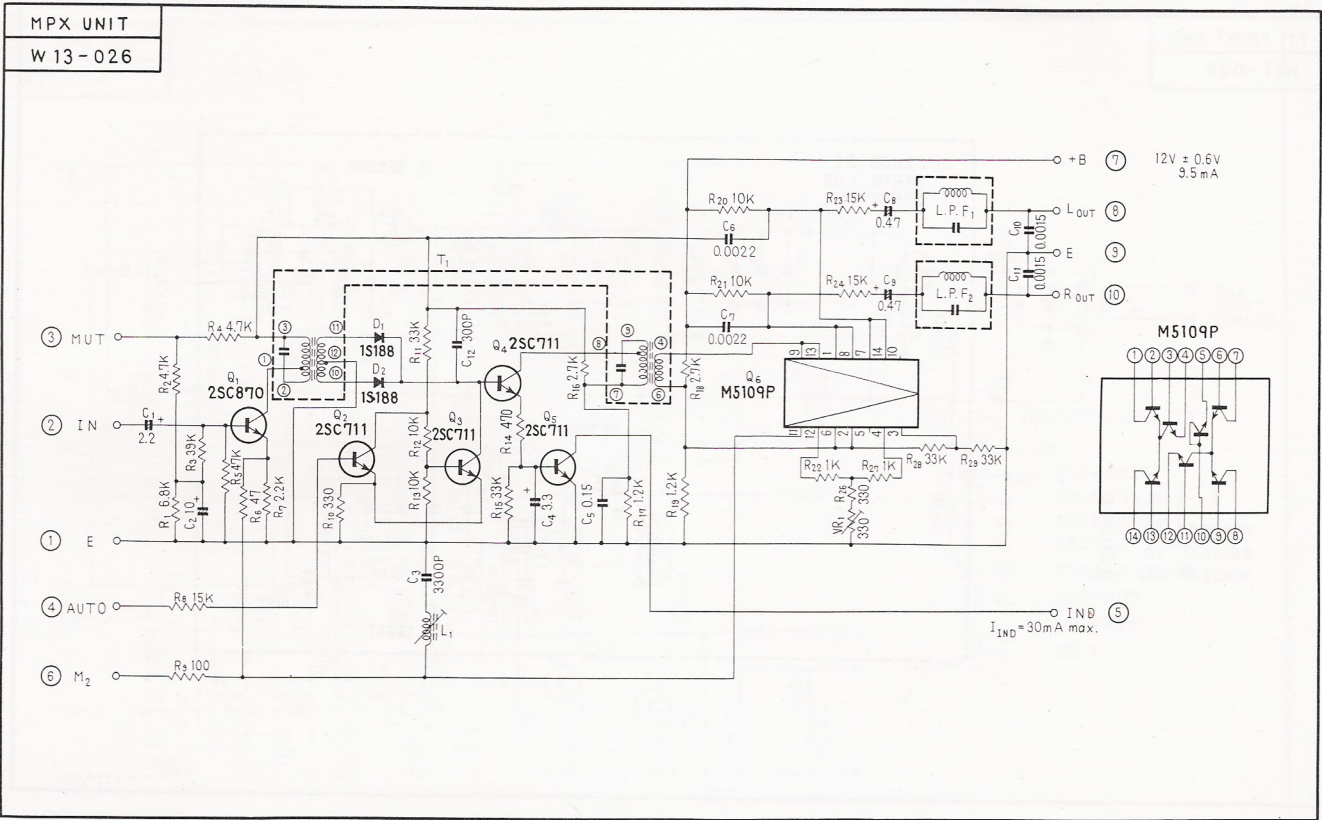


# AM TUNER UNIT

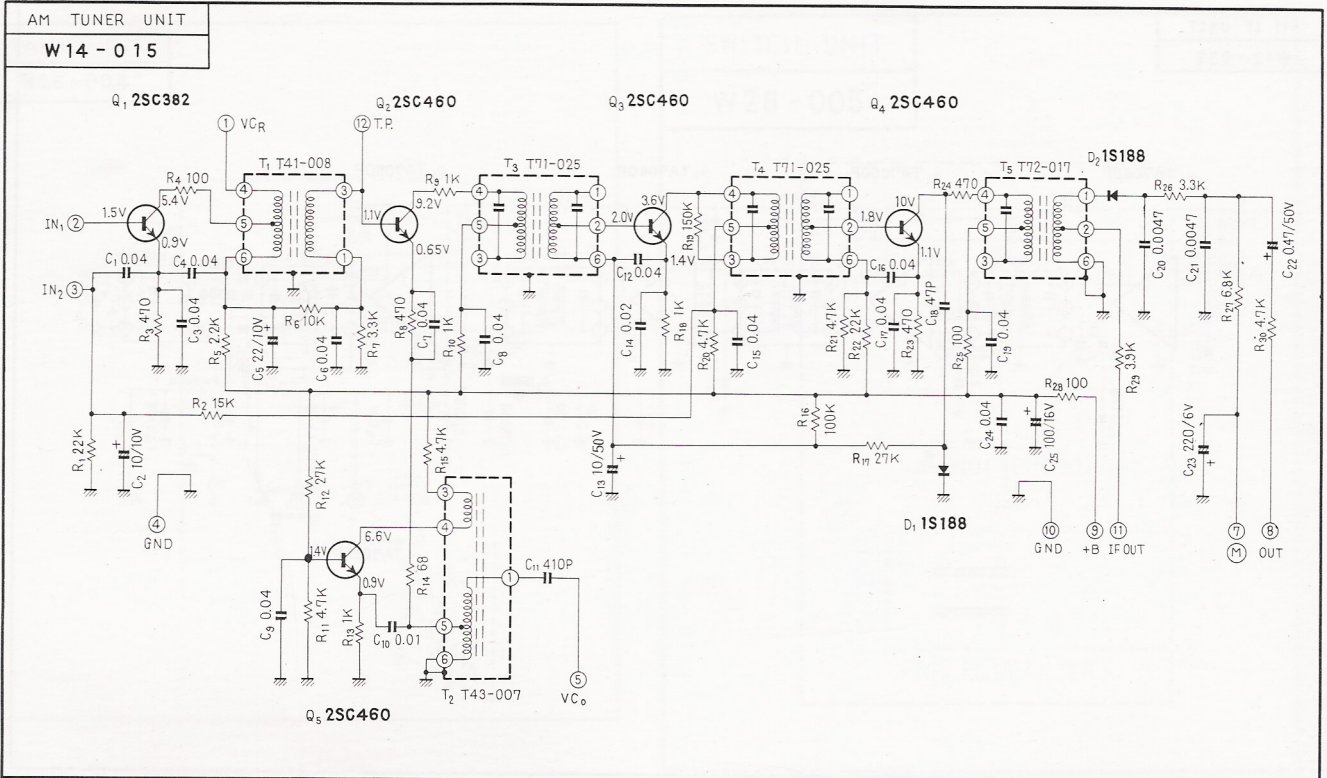


MUTING UNIT

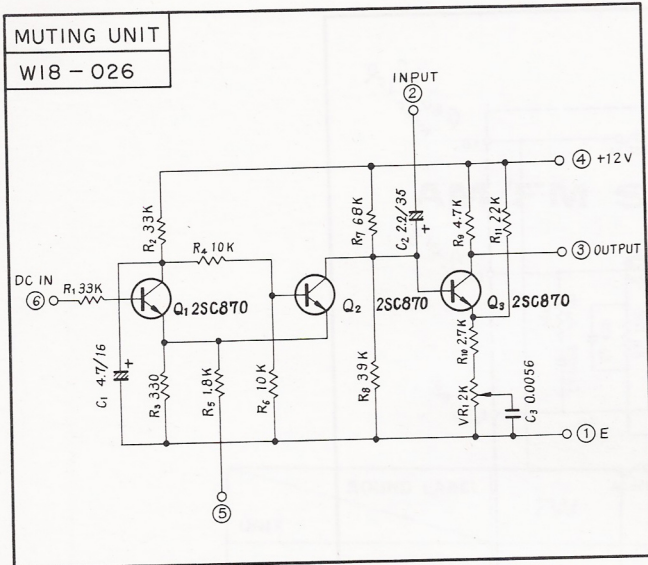


HEAD AMP UNIT

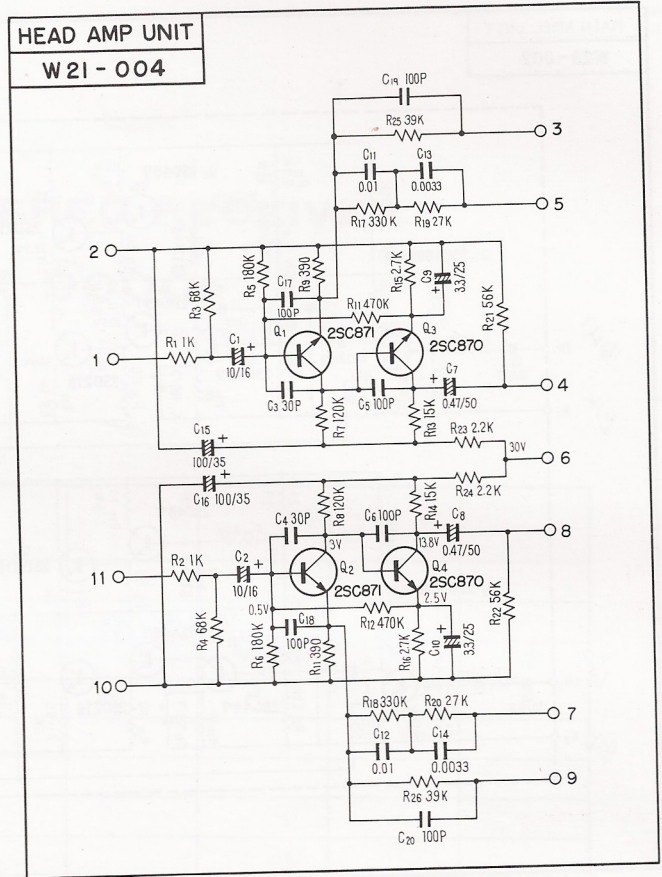


CONTROL AMP UNIT

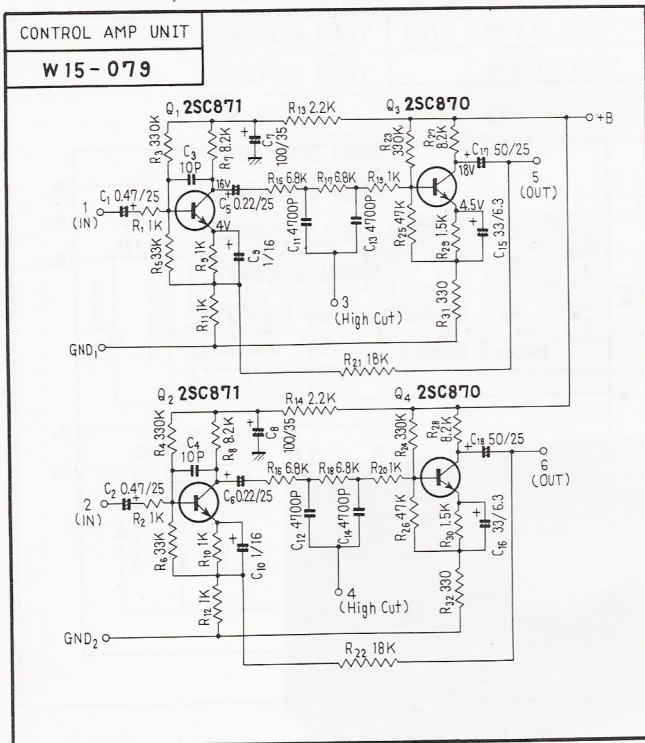


CONTROL UNIT

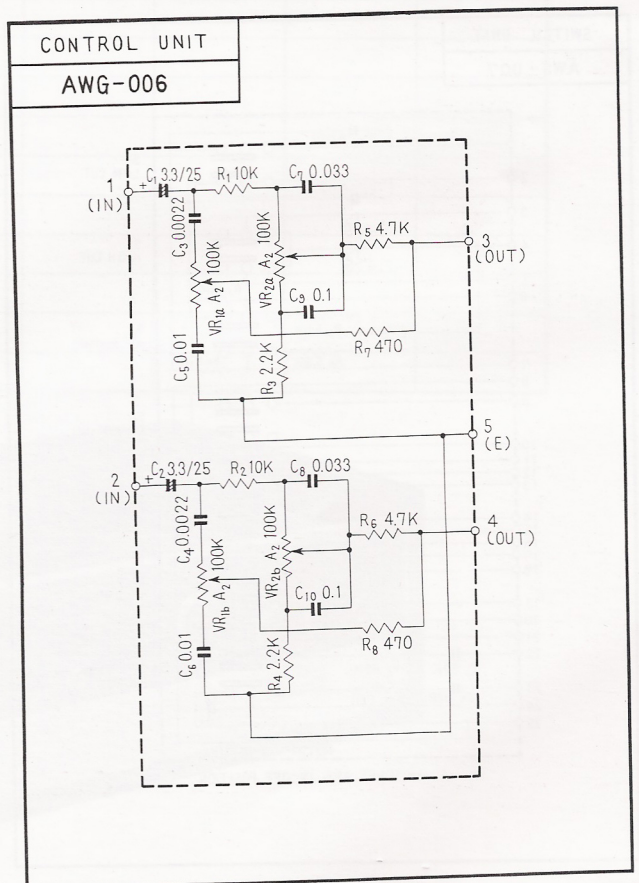

# MAIN AMP UNIT

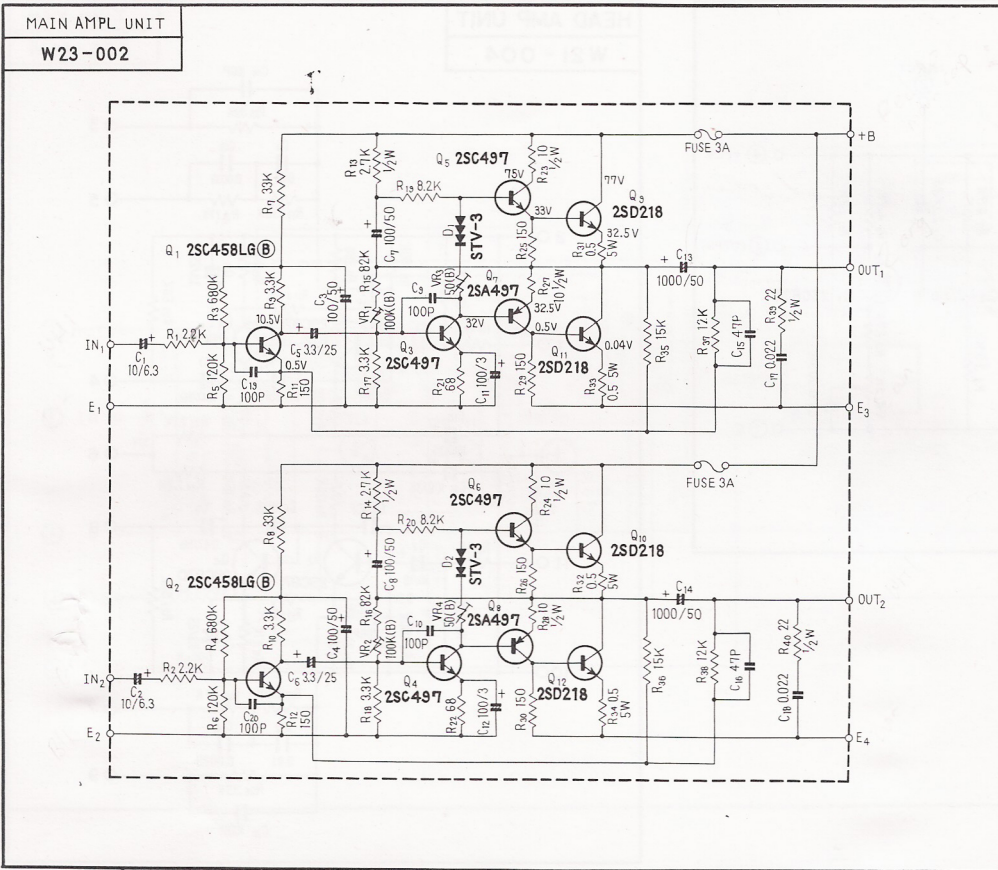

# SWITCH UNIT

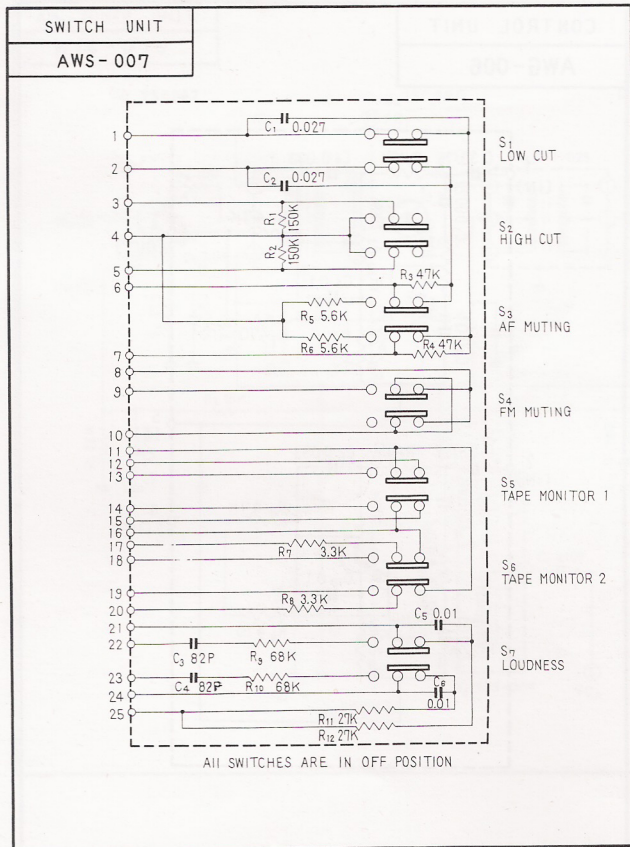

# POWER SUPPLY UNIT

